


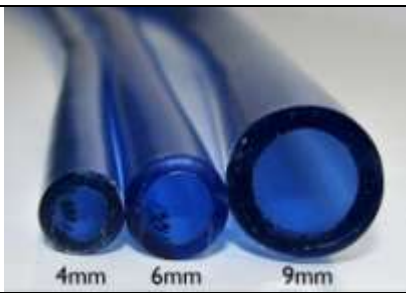

Feed Tube & Connectors

We've been getting a few questions about Feed Tube, how it can be supplied, and what sizes, etc. So we have made up this little chart (because we like charts ☺).


		By the metre	As a standard length	1.5 metre length with Springs 
4mm (internal diameter)	Injectors	PLAS114 (per metre)	SH7 (for 1 mtr length)	x
6mm (internal diameter)	Older 20ml Drenchers	PLAS10 (per metre)	SP810 (for 1.5 mtr length)	WX1 (for 1.5 mtr length with 2 springs)
9mm (internal diameter)	Newer 20ml Drenchers, larger size Drenchers, Pour-on Applicators	PLAS67 (per metre)	SH46 (for 1.5 mtr length)	WX172 (for 1.5 mtr length with 2 springs)

Here's some info about the cool little Tube Adaptors we have...
very handy for joining different sizes of feed tube together!


Tube Adaptors



SH1027
Connects a 6mm (1/4) bore tube to a 9mm (3/8) bore tube



SH1029
Connects a 6mm (1/4) bore tube to a 4mm bore tube.



WX1629A
Connects a 6mm (1/4") bore tube to a 9mm (3/8") bore tube.
Comes packed in a plastic bag with the tube connector, tube & spring.

